

Keyboard Legend iChartPlus Version 2.6

H	hides/unhides tool bar on side
L	changes to Snellen letters
E or I	changes to tumbling E chart
C or Q	changes to tumbling C chart
P	changes to picture chart
O	changes to HOTV
N	changes to numbers
V	changes to vertical line of letters
T	toggles contrast 100%, 70%, 30%
G	brings up digital photo gallery
K	mask/unmask screen
R or W	red/green screen
B or U	black screen
S	changes to single line of images
J	changes to single image
M	changes to multiple lines of images
Space bar	randomizes images, same acuity line
Enter	randomizes images, same acuity line
Page Up	increases size acuity line
Page Down	decreases size acuity line
Number keys	changes to corresponding acuity line
X	closes program
<ALT> F4	closes digital library (when open)
<ALT> F4	(<u>twice</u>) - closes video player (when open)

Remote Legend iChartPlus Version 2.6

Note: These are the default remote commands. To customize, unhide toolbar (H), select "remote," make changes, save, exit program, restart program.

Stop	20/20	Vol-Up	Increases acuity level
Play	20/30	Vol-Down	Reduces acuity level
Prev Track	20/40	Mute	Multi line
Reverse	20/50	Up Arrow	Tumbling C
FForward	20/60	Down Arrow	Red/Green screen
NextTrack	20/70	Left Arrow	Tumbling E
Pause	20/100	Right Arrow	Numbers
*	Single line	Select	Randomizes
		Menu	Single image

Programming the remote to your preferences:

Touch "**H**" on your keyboard to unHide the radio buttons on the right hand side.
Click the "Remote" near the bottom.

- The left column details the remote buttons, the right column has the default-programing.
- You may leave the default selections in place or click the arrow on the right for a drop down menu.
- Use the sliding button to choose whatever function you prefer for that particular remote button.
- Choose the settings you prefer.
- Click "Save"

Now, (important) **exit** the program and **restart** the program (not your computer)
The settings you chose should be saved from here on out.